


# 3/8" AIR DRILL

## EXPLODED VIEW

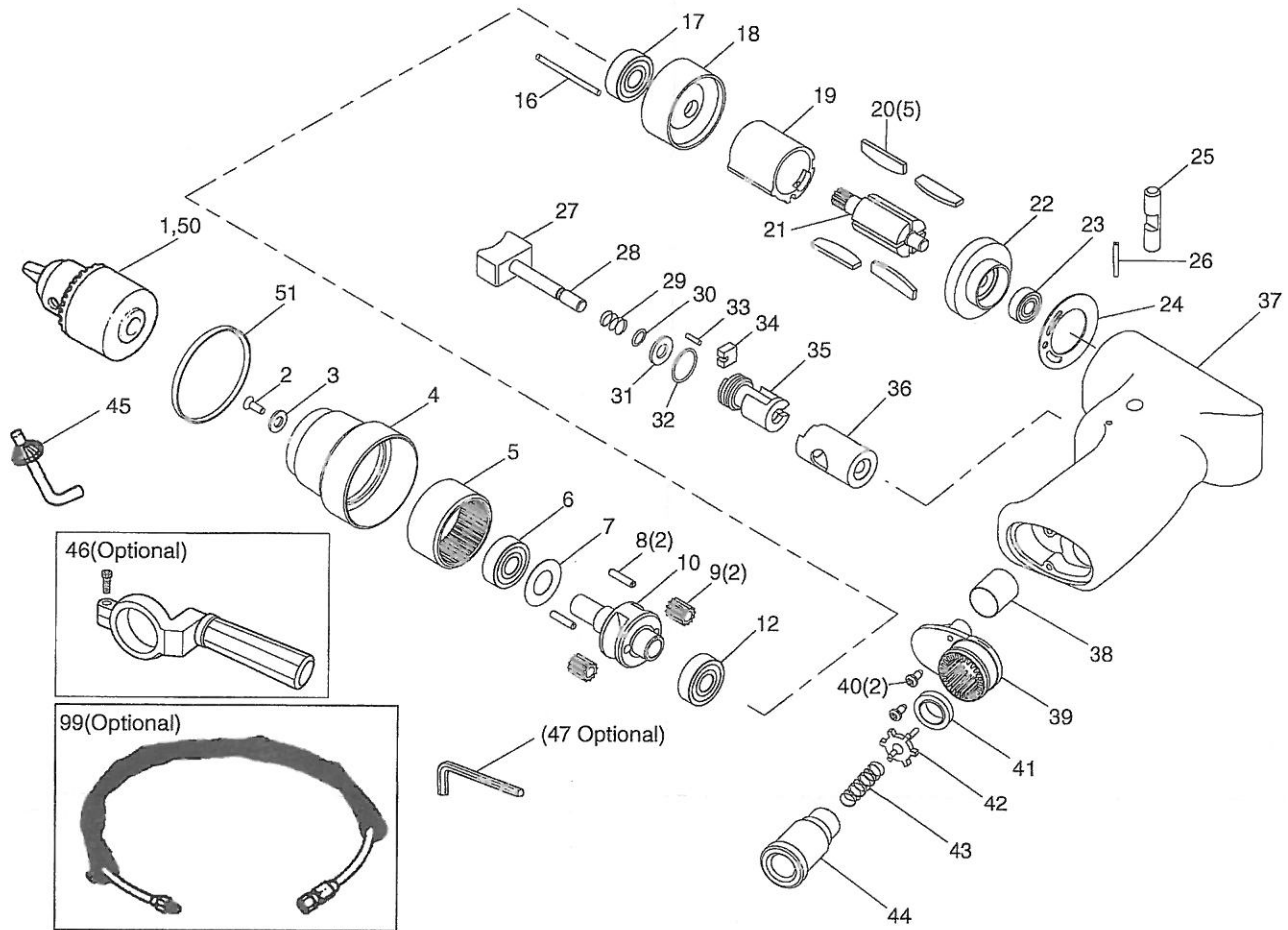

### PARTS LIST

Index No.	Parts No.	Description	Qty. Per tool
1	7525-01	Drill Chuck	1
2	7525-02	Screw	1
3	7525-03	Chuck Spacer	1
4	7525-04	Clamp Nut	1
5	7525-05	Internal Gear	1
6	7525-06	Ball Bearing	1
7	7525-07	Washer	1
8	7525-08	Planet Gear Pin	2
9	7525-09	Planet Gear	2
10	7525-10	Planet Carrier	1
12	7525-12	Ball Bearing	1
16	7525-16	Motor Pin	1
17	7525-17	Ball Bearing	1
18	7525-18	Front End Plate	1
19	7525-19	Cylinder	1
20	7525-20	Rotor Blade	5
21	7525-21	Rotor	1
22	7525-22	Rear End Plate	1
23	7525-23	Ball Bearing	1
24	7525-24	Motor Gasket	1
25	7525-25	Reverse Button	1
26	7525-26	Roll Pin	1
27	7525-27	Trigger	1
28	7525-28	Valve Shaft	1
29	7525-29	Spring	1
30	7525-30	O-Ring	1
31	7525-31	Washer	1
32	7525-32	O-Ring	1
33	7525-33	Needle Roller	1

Index No.	Parts No.	Description	Qty. Per tool
34	7525-34	Slide Plate	1
35	7525-35	Reverse Valve	1
36	7525-36	Reverse Bush	1
37	7525-37	Motor Housing	1
38	7525-38	Silencer	1
39	7525-39	Deflector	1
40	7525-40	Screw	2
41	7525-41	Valve Seat	1
42	7525-42	Valve	1
43	7525-43	Valve Spring	1
44	7525-44	Air Inlet	1
45	7525-45	Chuck Key	1
(46)	7525-46	Handle Kit	(1)
(47)	7525-47	Hexagon Wrench	(1)
50	7525-50	Key Less Chuck	1
51	7525-51	Ring	1
98	7252-98	Housing Assy (Incl:25-44)	1
99	7525-99	Exhaust Hose Set (Optional)	1